

# EXOS / EJA SERIES

---



EXOS 58



EXOS 48



EXOS 38



EJA 48



EJA 38

Welcome to Osprey. We pride ourselves on creating the most functional, durable and innovative carrying product for your adventures. Please refer to this owner's manual for information on product features, use, maintenance, customer service and warranty.

## OWNER'S MANUAL

---



[ospreyeurope.com](http://ospreyeurope.com)

# OVERVIEW



## SHARED FEATURES

- 1 Top lid web loop attachment points
- 2 Removable floating top lid with top- and under-lid zippered pockets
- 3 Dual, removable side compression straps
- 4 Stow-on-the-Go™ trekking pole attachment
- 5 Dual access stretch mesh side pockets with InsideOut™ compression straps
- 6 Accessory cord attachment points
- 7 Front stretch mesh pocket for stashing gear
- 8 Removable sleeping pad straps
- 9 Ice axe attachment with bungee tie-off
- 10 Sternum strap with integrated safety whistle
- + Integrated FlapJacket™ cover for lidless use
- + Internal reservoir sleeve

## FABRIC

- MAIN** 100D High Tenacity Nylon
- ACCENT** 100D High Tenacity Nylon Triple Check Dobby
- BOTTOM** 210 High Tenacity Nylon

# OVERVIEW

## EXOS 58

MEN'S

SPECS	S	M	L
Cubic Inches	3356	3539	3722
Liters	55	58	61
Pounds	2.69	2.71	2.74
Kilograms	1.22	1.23	1.24
Inches	32h x 16w x 15d		
Centimeters	80h x 41w x 37d		
<b>STRIPPED WEIGHT</b>	2.38		
<b>LOAD RANGE</b>	15-40 lb   7-18 kg		



## EXOS 48

MEN'S

SPECS	S	M	L
Cubic Inches	2746	2929	3112
Liters	45	48	51
Pounds	2.6	2.62	2.65
Kilograms	1.18	1.19	1.20
Inches	31h x 16w x 13d		
Centimeters	79h x 40w x 32d		
<b>STRIPPED WEIGHT</b>	2.31		
<b>LOAD RANGE</b>	15-40 lb   7-18 kg		



## EXOS 38

MEN'S

SPECS	S	M	L
Cubic Inches	2136	2319	2502
Liters	35	38	41
Pounds	2.53	2.56	2.58
Kilograms	1.15	1.16	1.17
Inches	29h x 16w x 12d		
Centimeters	74h x 40w x 30d		
<b>STRIPPED WEIGHT</b>	2.28		
<b>LOAD RANGE</b>	15-40 lb   7-18 kg		



# OVERVIEW

## EJA 48

WOMEN'S

SPECS	S	M
Cubic Inches	2746	2929
Liters	45	48
Pounds	2.55	2.57
Kilograms	1.16	1.17
Inches	28h x 16w x 13d	
Centimeters	72h x 40w x 33d	

**STRIPPED WEIGHT** 2.24

**LOAD RANGE** 15-40 lb | 7-18 kg



## EJA 38

WOMEN'S

SPECS	S	M
Cubic Inches	2136	2319
Liters	35	38
Pounds	2.48	2.51
Kilograms	1.13	1.14
Inches	27h x 16w x 12d	
Centimeters	68h x 40w x 31d	

**STRIPPED WEIGHT** 2.20

**LOAD RANGE** 15-40 lb | 7-18 kg



# CARRY



## 1 ULTRALIGHT AIRSPEED™ SUSPENSION

- + 6065 aluminum frame
- + 3D-tensioned breathable mesh backpanel with side ventilation

## 2 EXOFORM™ HARNESS

- + Seamless layered mesh provides improved comfort and cushioning
- + 15 mm adjustable slide sternum strap
- + Stretch mesh energy-gel pocket

## 3 EXOFORM™ HIPBELT

- + ErgoPull™ closure
- + Seamless layered mesh provides improved comfort and cushioning



# SIZING / FIT



## EXOS - MEN'S SIZING

- S 16-19" / 40.5-48 cm
- M 18-21" / 46-53 cm
- L 20-23" / 51-58.5 cm

## EJA - WOMEN'S SIZING

- S 16-19" / 40.5-48 cm
- M 18-21" / 46-53 cm




## HARNESS FIT

The harness straps should wrap fully around your shoulders with no gaps between the pack and back. The padded part of the harness straps should end 1"/2.5cm - 2"/5cm below the armpits and the sternum strap adjusted to approximately 2"/5cm below the collarbone.

## HARNESS SIZING

- A Completely loosen the pack's hipbelt straps, harness straps and load lifters.
- B Load the pack with 10-20lbs/4-9kg of gear.
- C Put on the pack ensuring the hipbelt is centered and resting over the user's hipbones. The hipbelt padding should sit half above and half below the hipbone. Buckle the hipbelt and tighten the hipbelt straps.

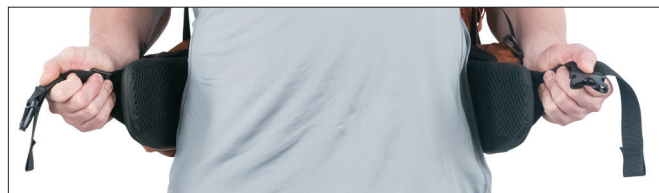

- D Tighten the shoulder harness straps by pulling them down and back. Adjust and buckle the sternum strap 2"/5cm below the collarbone. Tighten the load lifts to transfer the weight off of the shoulders.



- E Find the harness yoke or where the harness straps come together near the user's neck. The yoke should be 2"/5cm below the C7 vertebra. The C7 vertebra can be located by tilting the head down and finding the bone that protrudes at the base of the neck.



- F Make note of how far the yoke is from the C7 vertebra. Based on this measurement, the torso can be adjusted to the desired 2"/5cm.



## C7 VERTEBRA



## ILIAC CREST



# FEATURE DETAILS



## TOP LID WEB LOOP ATTACHMENT POINTS

Top lid and front panel attachment points can be used to secure additional gear externally.



## REMOVABLE FLOATING LID WITH TOP- AND UNDER-LID ZIPPERED POCKETS

Removable top lid for trips that require less gear or to save weight.

- Unbuckle the front retention straps.
- Locate and unclip the buckles next to the load lifter triglides.
- Unthread the male buckle piece through the web loop.
- Reverse the steps listed to reattach the top lid.



## DUAL ACCESS STRETCH MESH SIDE POCKETS WITH INSIDEOUT™ COMPRESSION STRAPS

Dual access side stretch mesh pockets store smaller items and provide access when wearing the pack. Items can be inserted from the top or side.



## DUAL, REMOVABLE SIDE COMPRESSION STRAPS

Removable side compression straps reduce weight.

- Unthread the webbing from the upper and lower ladder lock.
- Unthread the webbing from the three plastic side compression attachment points.
- To replace, reverse the steps.




## STOW-ON-THE-GO™ TREKKING POLE ATTACHMENT

Osprey's Stow-on-the-Go™ trekking pole attachment is designed to quickly attach and carry trekking poles while wearing a pack.

- Locate the elasticized loop on the lower left side of pack. While pulling the loop out from the pack, insert the basket end of the trekking poles into the loop.
- On the left harness strap locate the trekking pole icon. Pull up on the cord to open, place pole handles in the loop and tighten with the cord lock to secure.
- Reverse these steps to remove the trekking poles.

# FEATURE DETAILS

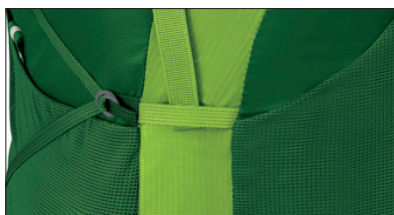

## ACCESSORY CORD ATTACHMENT POINTS

Provide additional external gear attachment options.



## FRONT STRETCH MESH POCKET FOR STASHING GEAR

Front stretch mesh pocket stores gear you need quick access to or holds wet gear to dry.



## REMOVABLE SLEEPING PAD STRAPS

Removable sleeping pad straps for external attachment.



## INTERNAL RESERVOIR SLEEVE

Place reservoir inside sleeve to help ensure proper pack weight distribution. Clip reservoir to buckled loop to keep upright.



## ICE AXE ATTACHMENT WITH BUNGEE TIE-OFF

The ice tool loops and bungee tie-offs provide secure tool attachment.

- A Slide the tool shaft through the top of the ice tool loop and flip the shaft up toward the top of the pack.
- B Loosen the bungee cord lock and route the tool handle through the bungee. Tighten the cord lock nesting it into the Y-clip to secure the tool into place.
- C Reverse to remove.



## STERNUM STRAP WITH INTEGRATED SAFETY WHISTLE



## INTEGRATED FLAPJACKET™ COVER FOR LIDLESS USE

When using pack without top lid, unfold FlapJacket™ buckles and attach to the front vertical compression straps.



---

For more information on this product and others, pack care, how to pack your pack, our lifetime guarantee, or to contact Osprey Customer Service, visit **ospreyeurope.com**.

**OWNER'S MANUAL**



---

ospreyeurope.com